




Mounting and Placement

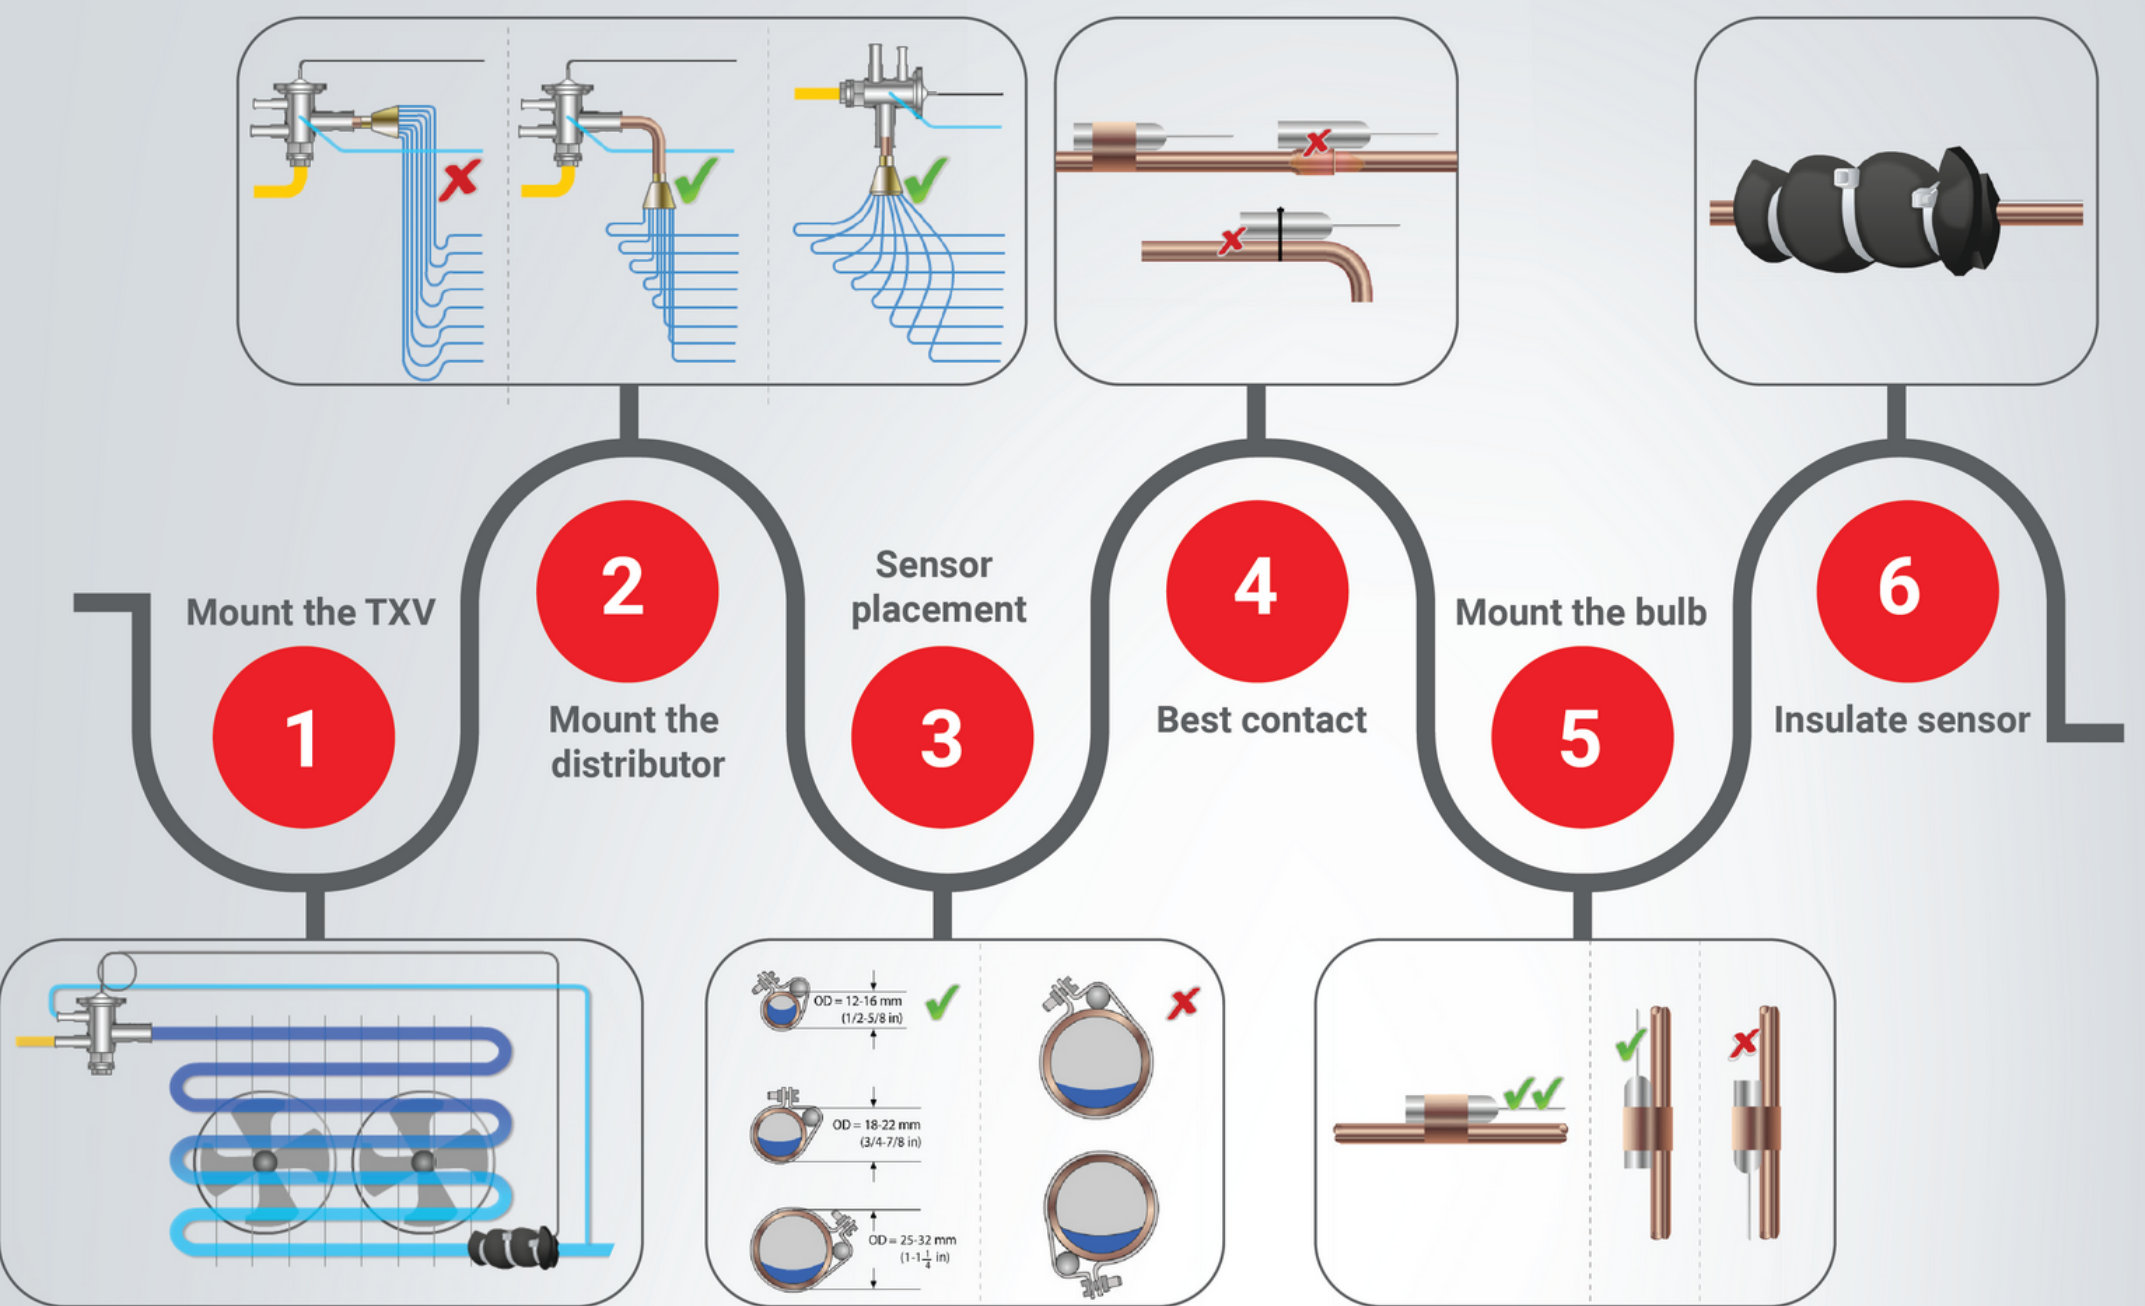

Superheat = protecting the compressor, optimizing efficiency

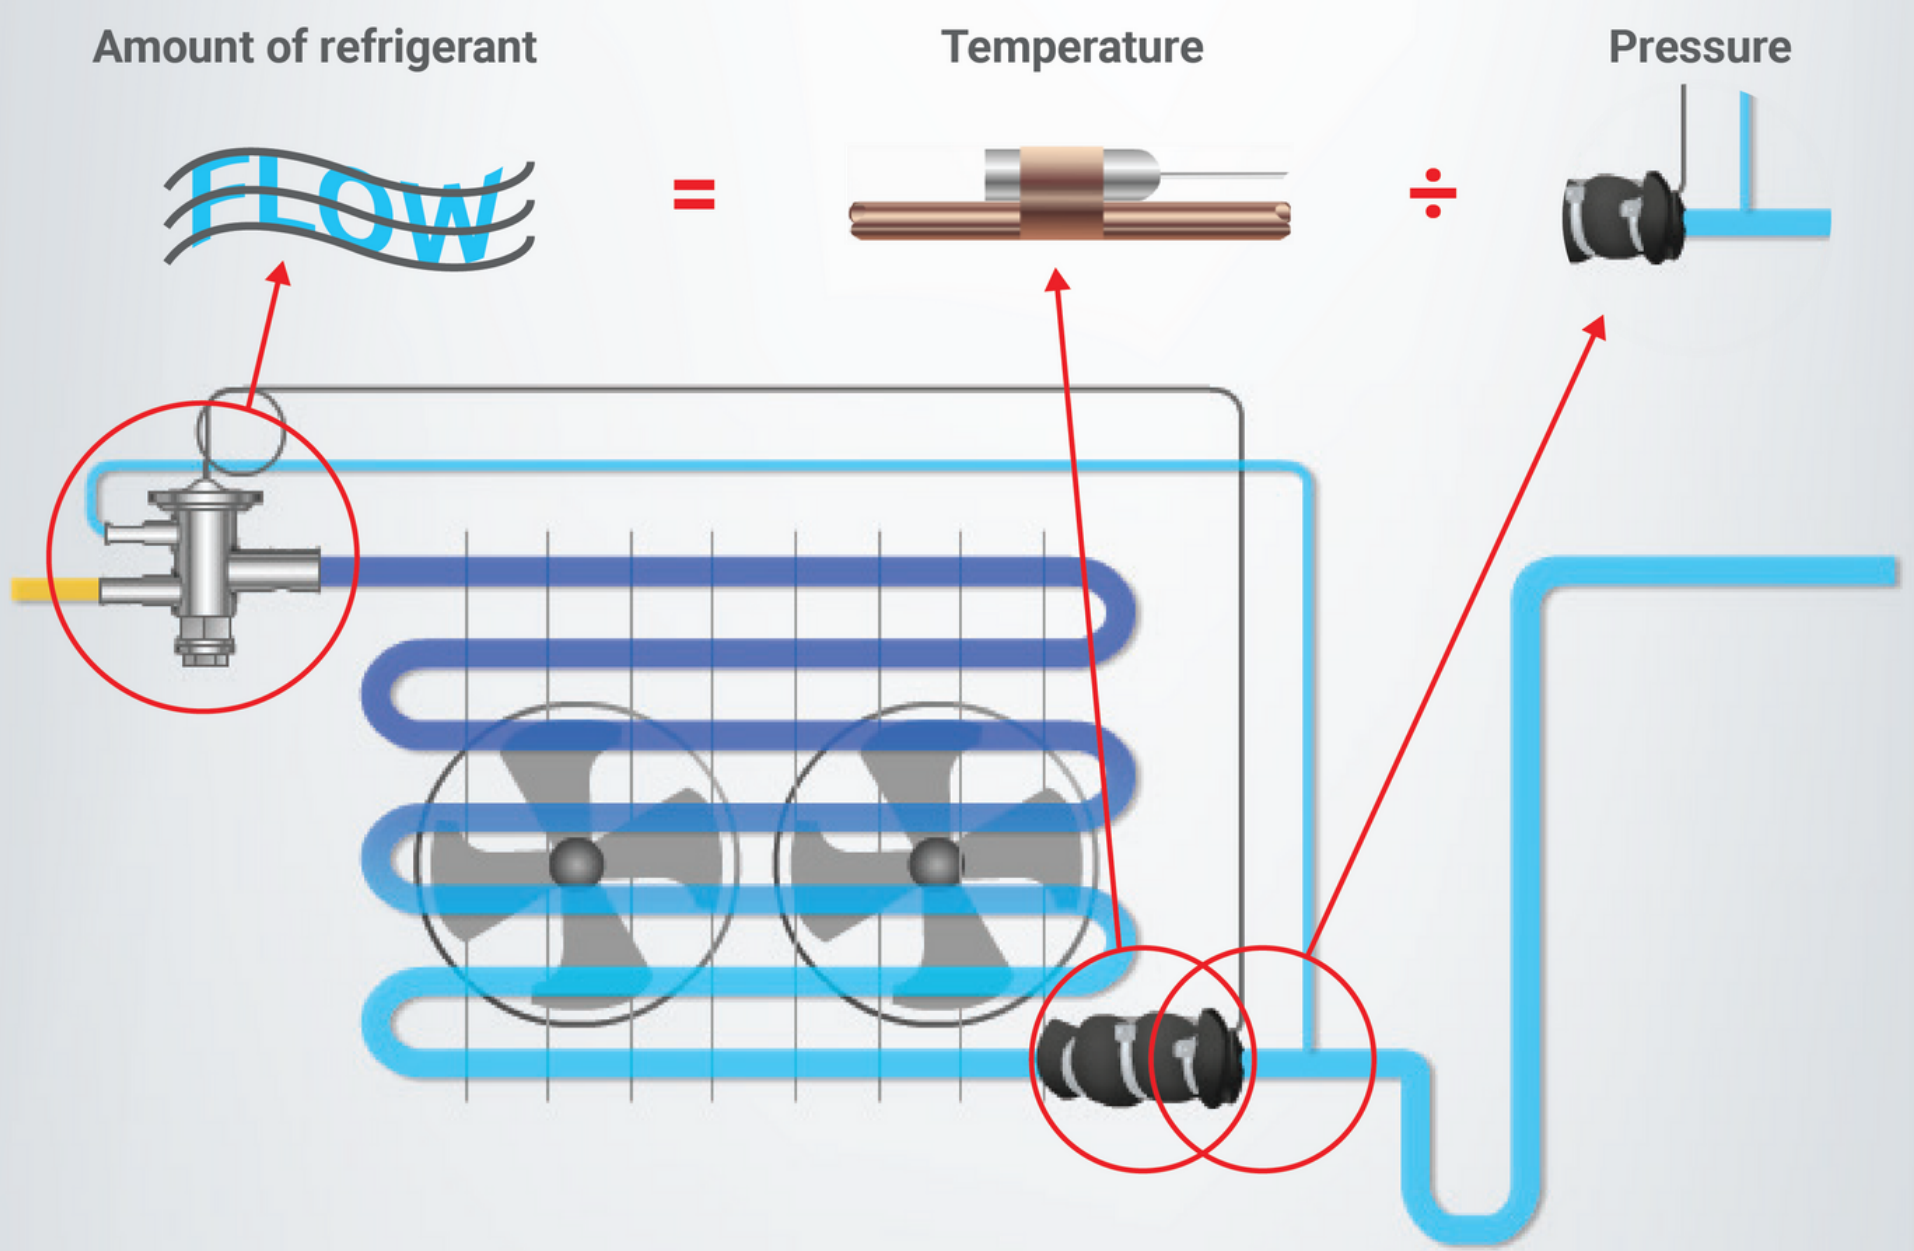

Superheat and adjustment

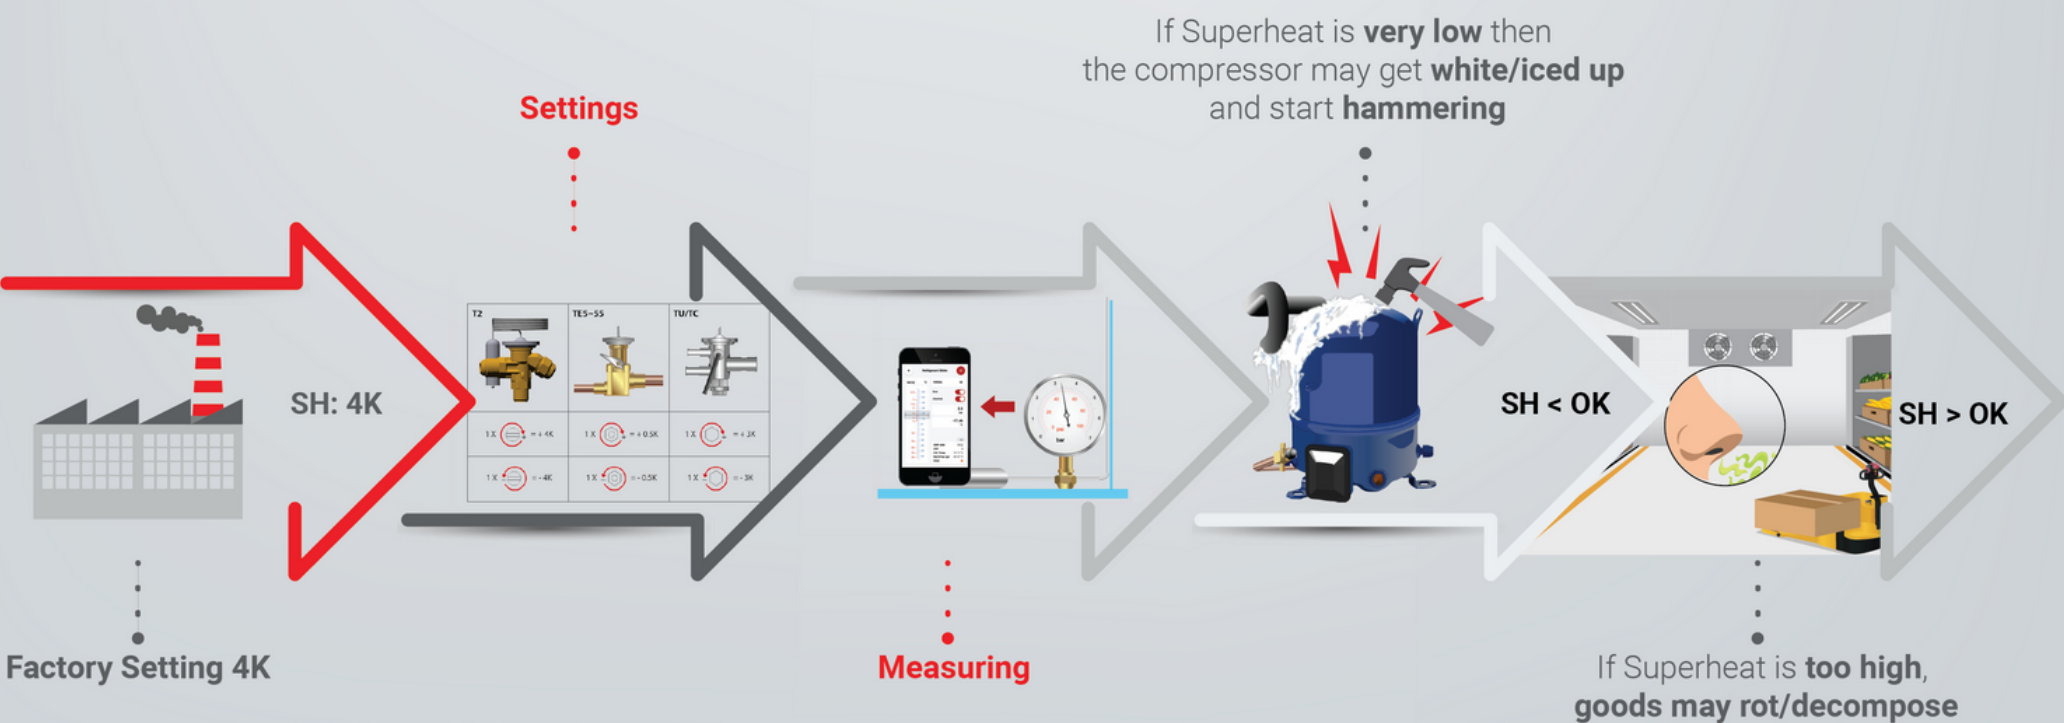

How to adjust superheat on Danfoss TXVs | HVACR Distillery Episode 9



Svend Jepsen shows you how to adjust the superheat setting on four different Danfoss thermostatic expansion valves, where you use the 4 Kelvin factory setting as base point for your adjustments. He also tells you a bit about the procedures, the tools, and how the factory setting is done.

